### **Dear Customer**

This document is for how to upgrade Netlink, Optilink, Syrotech FTTH Modems

Use respective Firmware's only (wrong firmware will damage Modems)


Open Browser Logon to 192.168.1.1


Netlink and Syrotech	Optilink	DBC
Username admin	Username admin	Username admin
Password stdONU101	Password admin	Password dbcONU101


Once logged in Go to Management > Device > Upgrade > Select Respect Firmware and Upgrade


After upgrade again login to modem and change the modem password

Steps Below for a sample Modem

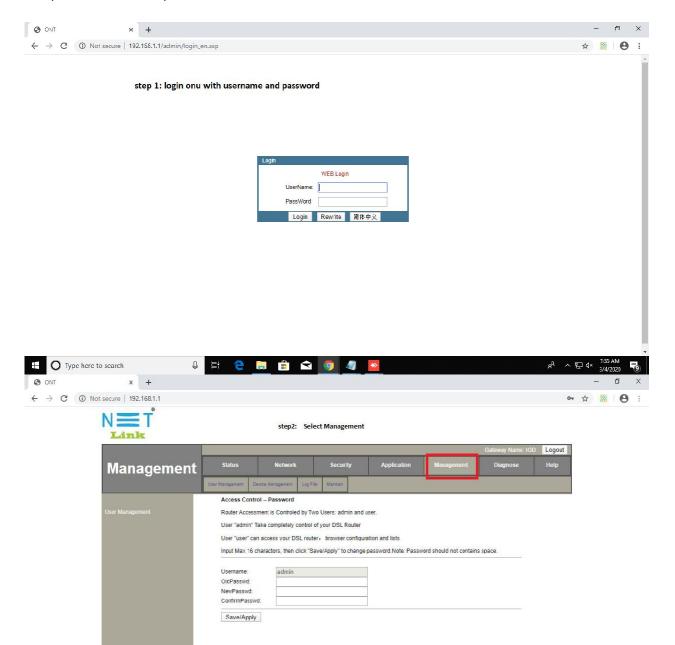

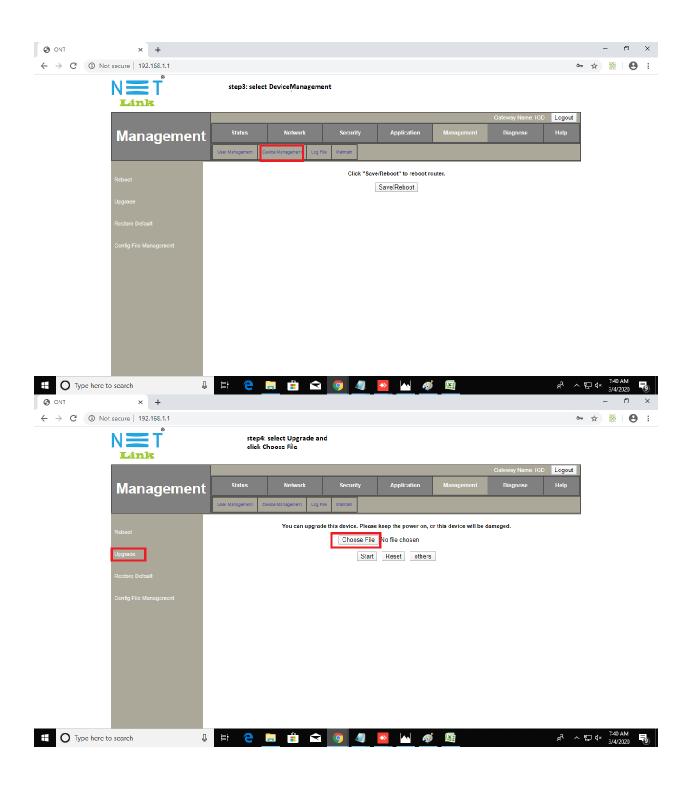

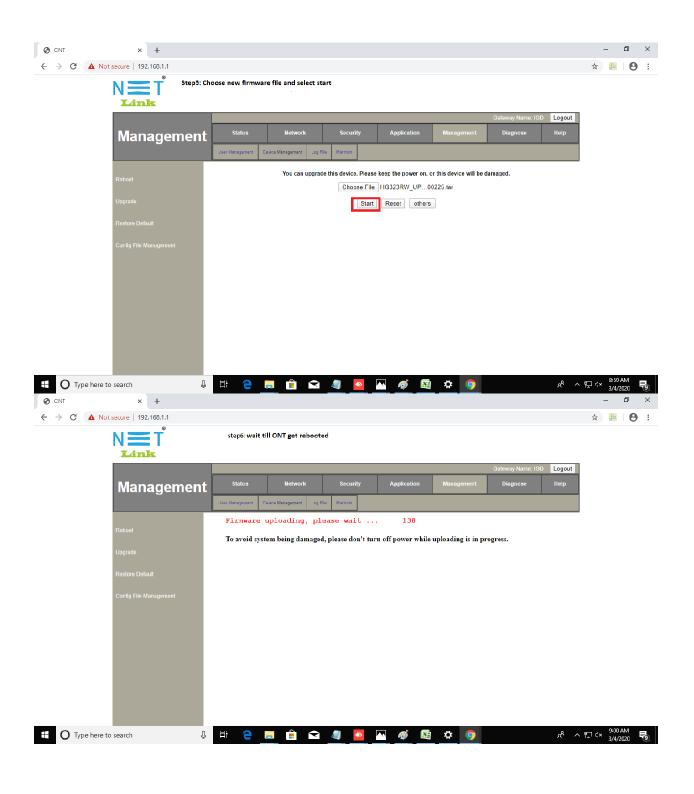

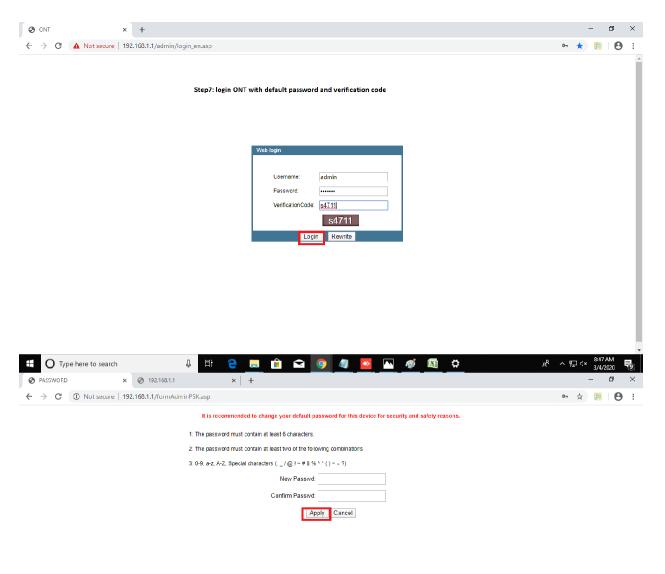

Step8: set new password and click apply



For Doubts you email to <a href="mailto:gponekm@gmail.com">gponekm@gmail.com</a> (for Ernakulam & Idukki customers only) with mobile num to contact

**OR Vendor Contact below** 

# <u>Netlink</u>

 $9400199334\,,\,9400199336\,,\,9400199337\,,\,9400199338\,,\,8086611446\,,\,808661448$ 

## **Syrotech**

7012189230 (Kerala)

# <u>Optilink</u>

76663 01000 (Kerala)

## <u>DBC</u>

9072322428 (Kerala) / 8879660667 / 8169970115 / 8879660673